



## Pulse 2 Users

### User instructions

#### Penalty

After four attempts to enter an incorrect code, the lock starts a 4-minute delay period. Each attempt to enter the code within the 4 minutes delay period restarts the count.

#### Low battery warning

A long beep during opening indicates a low battery level.  
Replace immediately the low battery with a new Alkaline battery.

#### Sound signals

A double beep normally indicates a correct operation. A long beep indicates an incorrect operation and the end of the operation itself.

#### Reccomendations

Do not use easily identifiable codes such as 123456, dates of birth or other personal information.

#### Change code *(Default Manager code "123456". Safely store the new code and perform various opening / closing tests before closing the safe door).*

To be performed with the door open!

Press and hold until the double beep. The LED remains on.

Enter the **old code**.

Enter the **new code**.

Confirm the **new code**.

Perform various opening / closing tests before closing the safe door.



#### Activate a new user

Press and hold until the double beep. The LED remains on.

Enter the Manager code.

Enter the code to be associated with the user.

Enter again the code to confirm it.



#### Delete an user

Press and hold until the double beep. The LED remains on.

Enter the Manager code.

The keypad beeps twice. The user is deleted.



#### Membrane test

Press and hold until the double beep. The LED remains on.

Enter the sequence of numbers from 1 to 0. A confirmation beep is given for each key.

A damaged key is indicated with a long beep



#### Time delay *(Time Delay programmable from 0 to 99 minutes; Open Window from 1 to 19 minutes)*


Press and hold until the double beep. The LED remains on.

Enter the Manager code. The keypad beeps twice.

Enter the values for the time delay and the open window in two digits (e.g. 10 and 05).

Confirm the values for the time delay and the open window in two digits (e.g. 10 and 05).

Attention, the time delay can only be lowered in the open window.

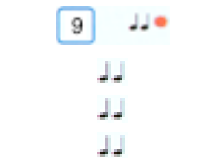

#### Further information

For the complete manual and further information on the product's features, please visit [www.tecnosicurezza.it](http://www.tecnosicurezza.it)

##### GLOBAL HEADQUARTERS

Tecnosicurezza SpA  
Via Cesare Battisti, 276  
37057 San Giovanni Lupatoto  
Verona  
Tel. +39 045 826 64 70  
Fax. +39 045 826 64 69  
info@tecnosicurezza.it

##### USA HEADQUARTERS

Tecnosicurezza Inc.  
50, Thomas Lane  
Versailles, KY 40383  
Tel. +1 859 490 89 30  
info@usatecno.com

##### SPAIN HEADQUARTERS

Tecnosicurezza Sa  
C/Menor, 4 - Nave 10  
Pol. Ind La Mina 28770  
Colmenar Viejo  
Tel. +34 91 804 33 91  
Fax. +34 91 804 32 63  
info@tecnosicurezza.es

